


Nota: La ubicación de sus componentes y sus conexiones puede variar según el modelo.
Note: Your components and connection locations may vary by model.

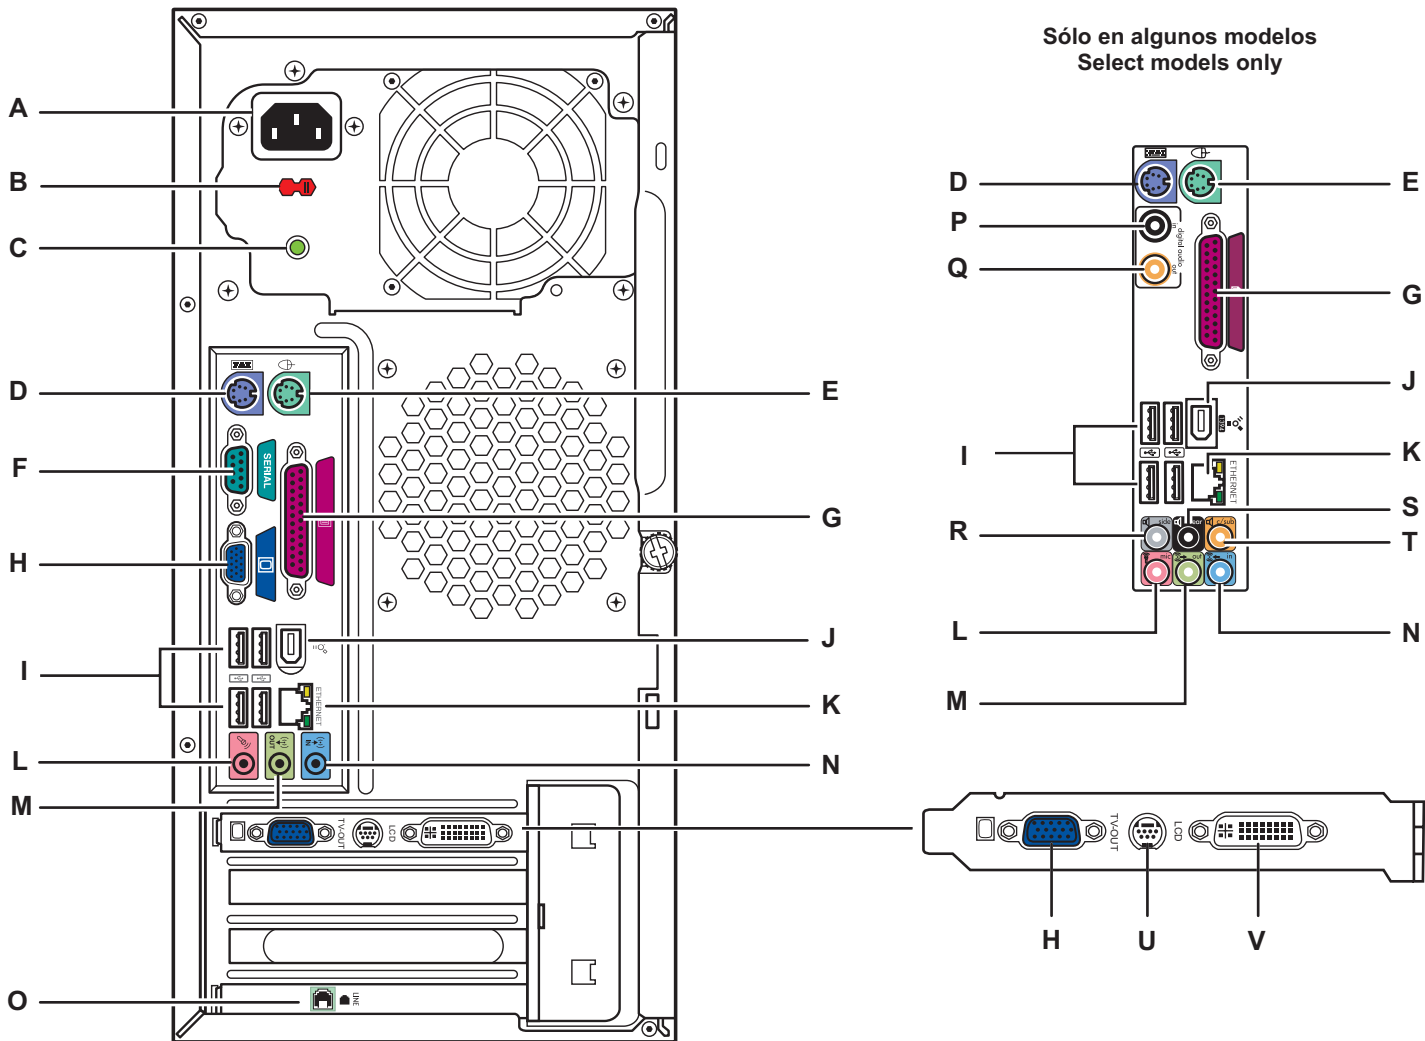

- A — Conector del cable de alimentación
- B — Selector de voltaje
- C — Indicador de encendido
- D — Conector de teclado PS/2
- E — Conector de ratón PS/2
- F — Puerto serie
- G — Puerto paralelo
- H — Puerto de monitor VGA
- I — 4 Puertos USB 2.0
- J — Puerto FireWire® (IEEE 1394)
- K — Red (Ethernet)
- L — Conector de micrófono
- M — Salida de línea de audio
- N — Entrada de línea de audio
- O — Módem (Entrada de línea RJ-11)

- Sólo en algunos modelos:**
- P — Entrada de audio digital
 - Q — Salida de audio digital
 - R — Puerto de altavoz lateral
 - S — Puerto de altavoz trasero
 - T — Puerto de altavoz central/subwoofer
 - U — S-video (Salida de TV)
 - V — Conector LCD DVI (sólo en algunos modelos)

- A — Power Cable connector
- B — Voltage selector
- C — Power LED
- D — PS/2 Keyboard connector
- E — PS/2 Mouse connector
- F — Serial port
- G — Parallel port
- H — VGA Monitor port
- I — 4 USB 2.0 ports
- J — FireWire® (IEEE 1394) port
- K — LAN (Ethernet)
- L — Microphone connector
- M — Audio Line Out
- N — Audio Line In
- O — Modem (Line In RJ-11)

- Select models only:**
- P — Digital Audio In
 - Q — Digital Audio Out
 - R — Side speaker port
 - S — Rear speaker port
 - T — Center speaker/subwoofer port
 - U — S-video (TV Out)
 - V — LCD DVI connector (select models only)